

Setting up the IPDC-E for Brivo OnAir®

- Connect the IPDC to your laptop using the USB connector.
- If running Windows XP, two popup windows will appear. A **Brivo IPDC Resources** popup and a **Found New Hardware** popup.
- In the **Found New Hardware** popup window, press **Cancel**.
- In the **Brivo IPDC Resources** popup window, double click on the first option: **Load the Brivo IPDC Resources Page using the program provided on the device**.
- The **Brivo IPDC USB Resources** page displays.
- If it is your first time visiting the page, click on the **Install the USB Drivers** link at the top of the page.

- Follow the Brivo IPDC USB Driver Installation:

Windows XP

Navigate to "My Computer"
Right click on "Brivo IPDC Resources"
Click on "Install Brivo USB Drivers"
Click "Next"
Accept any warning dialogs
Click Finish

Windows Vista/7

Navigate to "Computer"
Right click on "Brivo IPDC Resources"
Click on "Install Brivo USB Drivers"
Allow the setup program to use administrative privileges
Click "Next"
Accept any warning dialogs
Click Finish

- Once the **IPDC USB Resources** are configured, click on the <http://192.168.207.1> link to access the Administrator Interface.

Setting up the IPDC-E for Brivo OnAir®

- To set up static parameters or proxy settings:
 - Connect the IPDC to a laptop.
 - Open your browser and enter the address <http://192.168.207.1>
- The login page will display prompting you for login information:
 - The default username is "cli".
 - The default password is "new5cli".

To set a static IP address:

- Click on the **Networking** tab.
- Click on **IP Configuration**.
- Click the “Deactivate DHCP” button.
- Fill in the fields according to the local IT staff.
- Click **Set Static Parameters**. Changes have been saved.

To set proxy server settings:

- Click on the **Networking** tab.
- Click **Proxy Server**.
- Fill out the fields according to the worksheet at the end of this document. If SOCKS5 proxy server settings are required, filled in:
 - Address
 - Port
 - Username
 - Password

Click **Accept**. Changes have been saved.



NOTE:

When you click submit, a page will display that may or may not give updates about the device's status. Allow the page to run to completion before powering down the device.

If you are unsure about any of the content of this guide or have any questions, please call Brivo Technical Support at (866) 274-6848 option 3, or email customercare@brivo.com.